



Lighting Control Wiring 10A - Molex Minifit 10p
CCW005

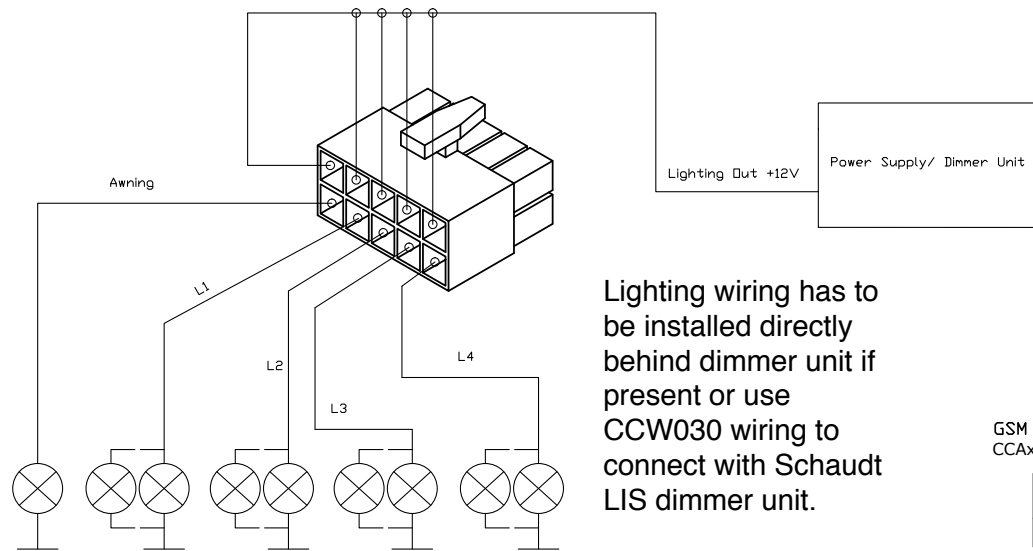


Lighting wiring has to be installed directly behind dimmer unit if present or use CCW030 wiring to connect with Schaudt LIS dimmer unit.


I/O Wiring - Molex Microfit 10p
CCW002

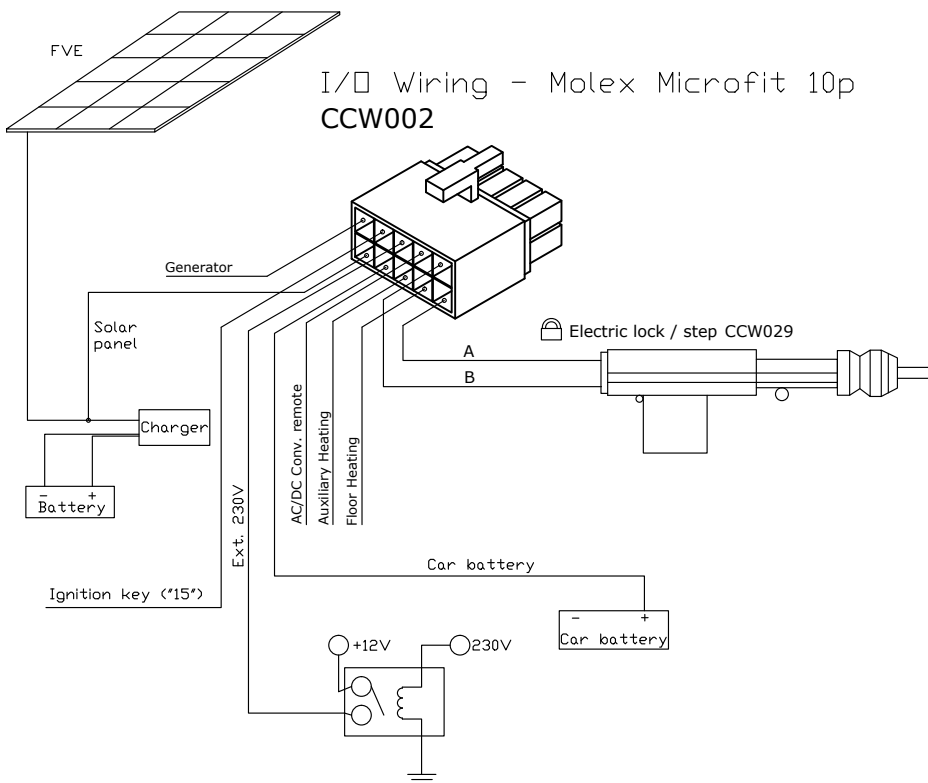


Alarm Inputs/Lighting Switches Wiring - Molex Microfit 10p
CCW003

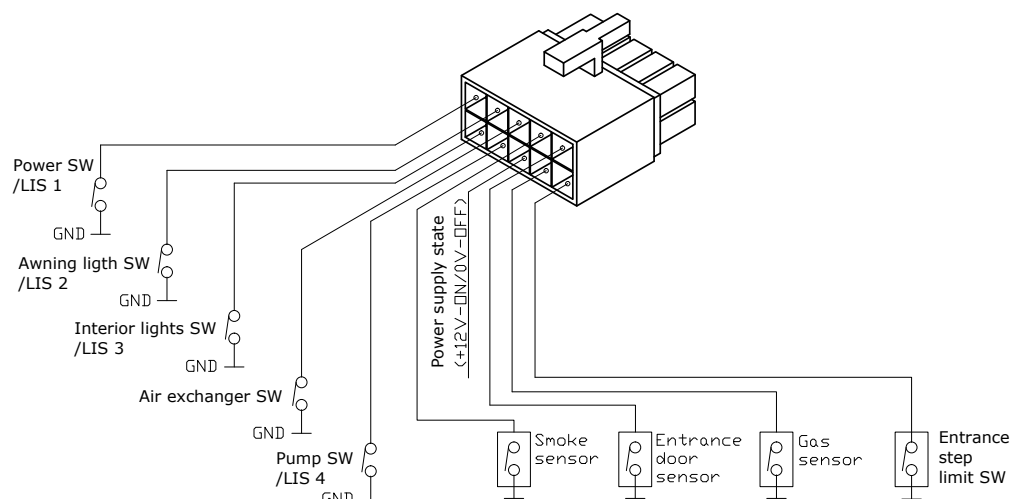


Leisure Telematics International

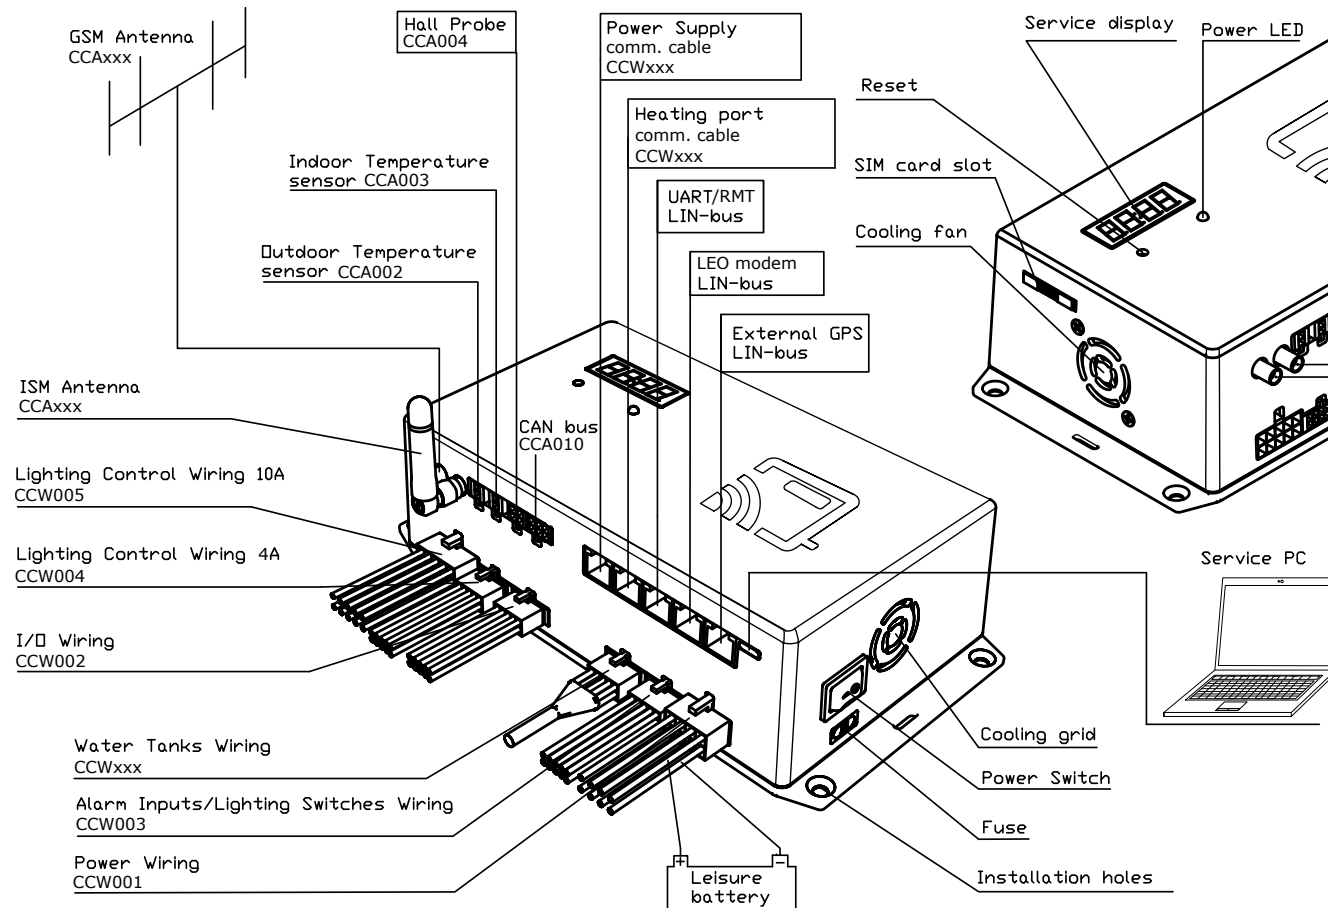

Power Wiring - Molex Minifit 8p CCW001

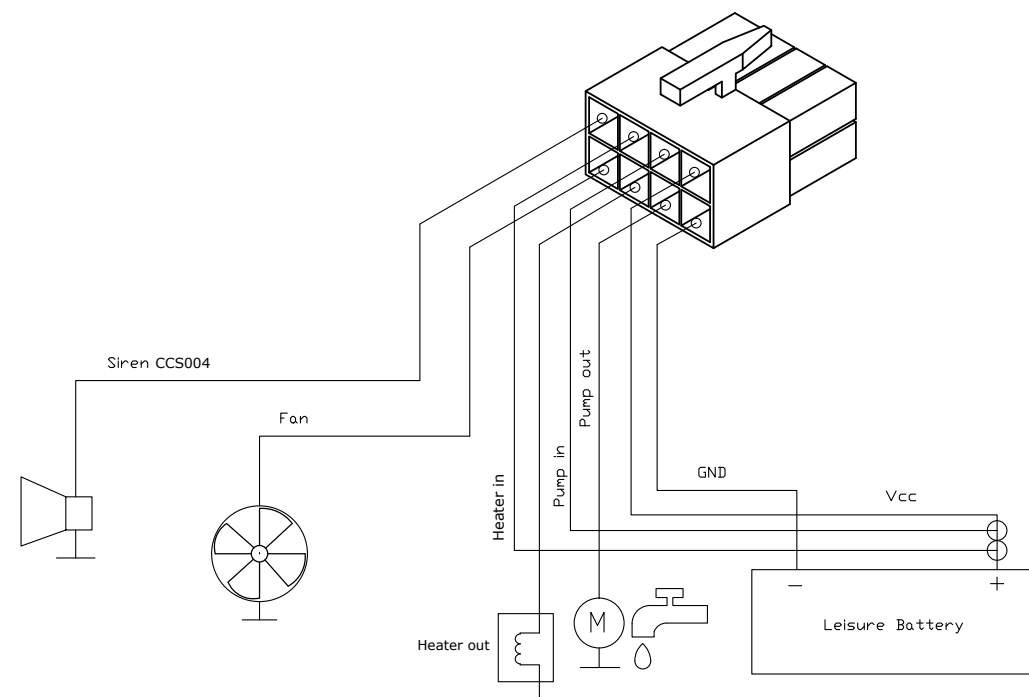


Heating comm. Cable Truma
CCW007 / CCW009

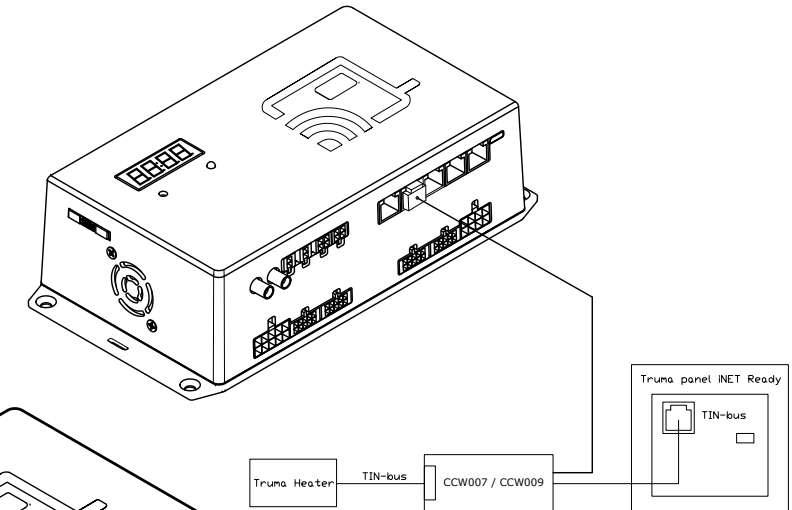

In case of purchasing the CaraControl Security Package use included self-adhesive external ISM antenna to ensure maximum signal level of wireless peripherals if necessary.

Heating Comm. Cable Alde
CCW006 / CCW008

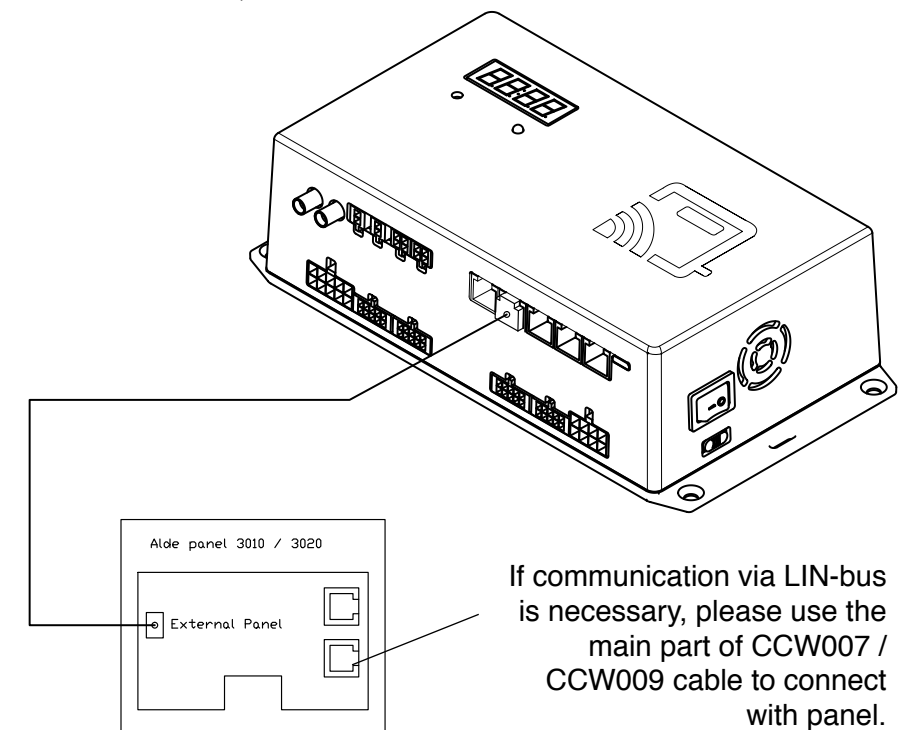

If communication via LIN-bus is necessary, please use the main part of CCW007 / CCW009 cable to connect with panel.

Installation
Diagram v2.0