




Lighting control wiring 6A CCW005 - Molex Minifit 10p

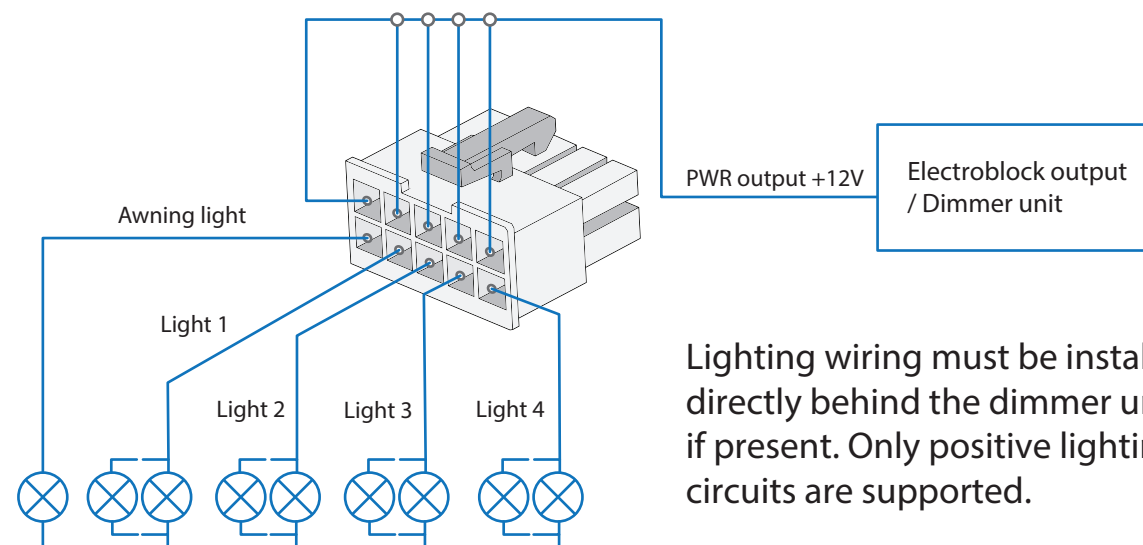

Lighting wiring must be installed directly behind the dimmer unit if present. Only positive lighting circuits are supported.





Installation Diagram Smart Home OBU v3


Disclaimer: Some circuits depicted in this document are available for OEM purposes only. Functions available for the aftermarket installation are defined by the smartphone application.




Truma heating connection

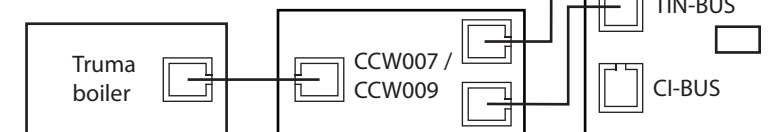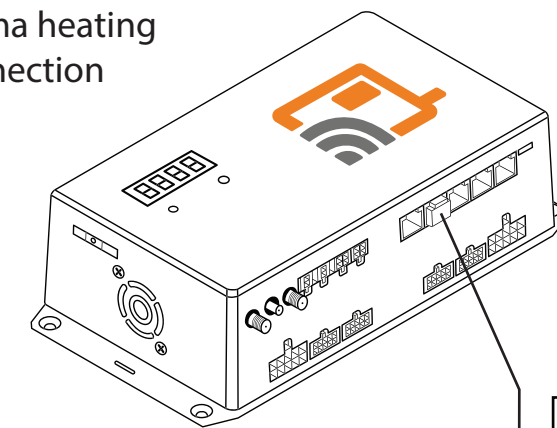



I/O Wiring CCW002 - Molex Microfit 10p

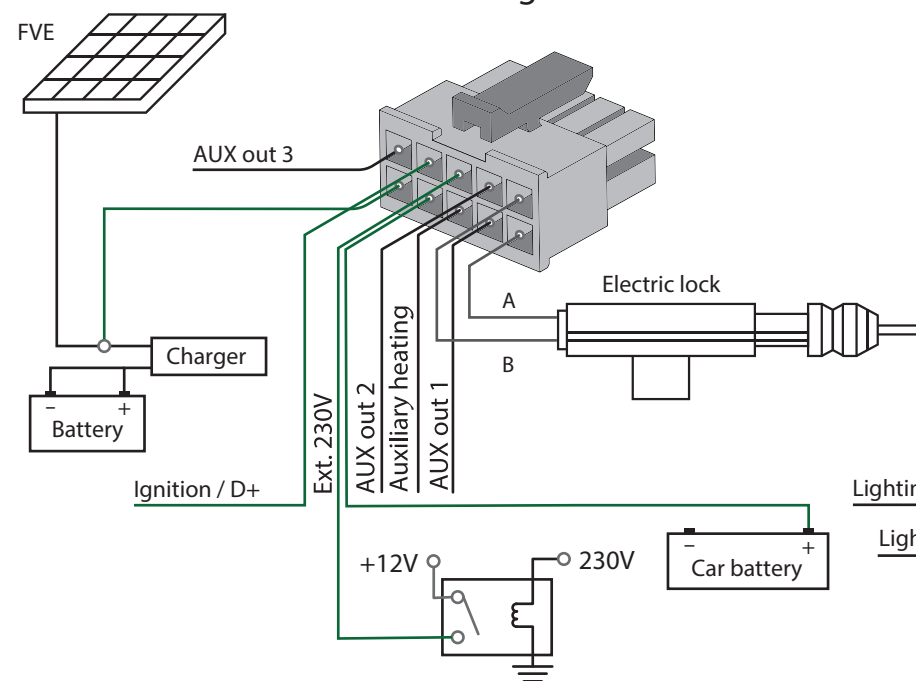


Alarm inputs / Switches wiring CCW003 Molex Microfit 10p

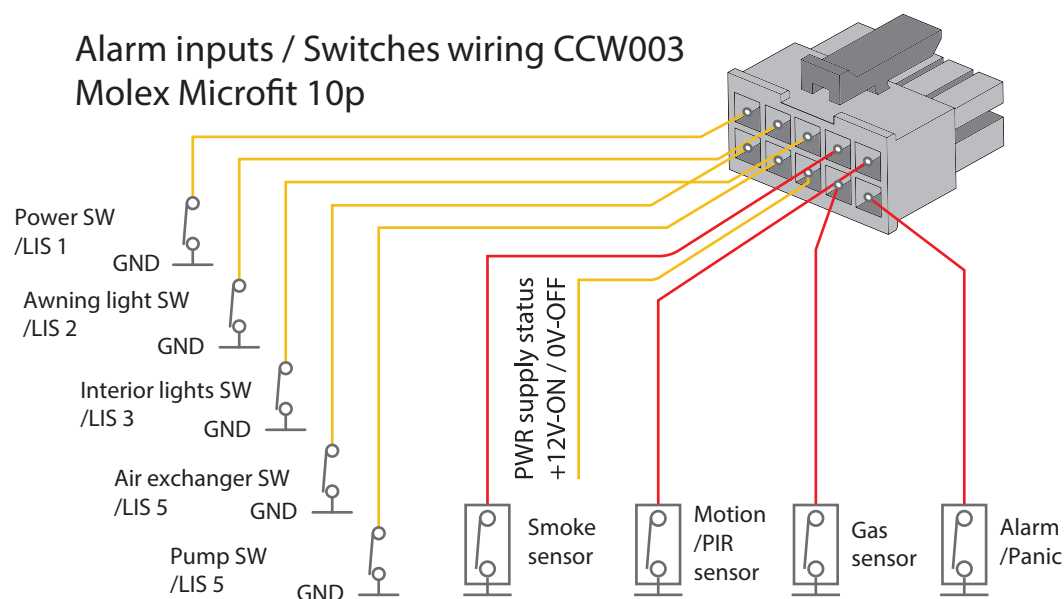



Power Wiring CCW001 Molex Minifit 8p

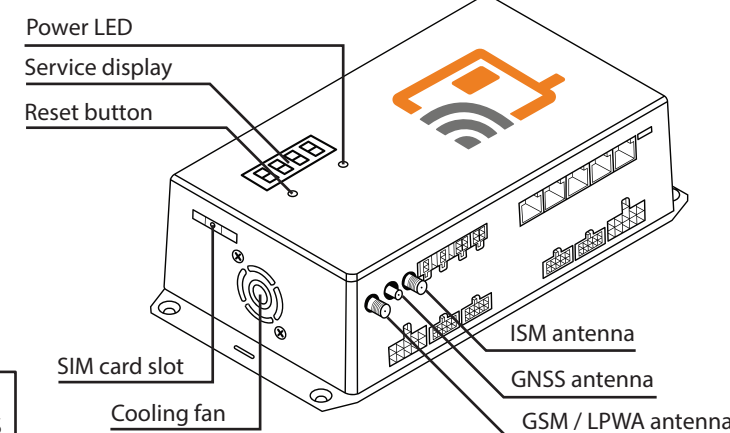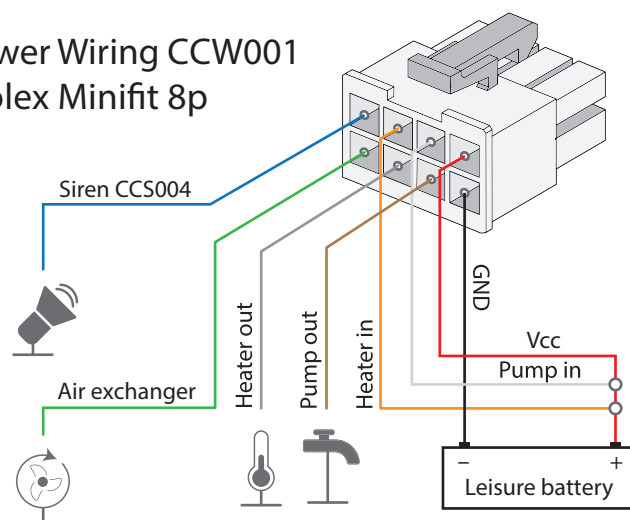

Fuel / LPG Tanks

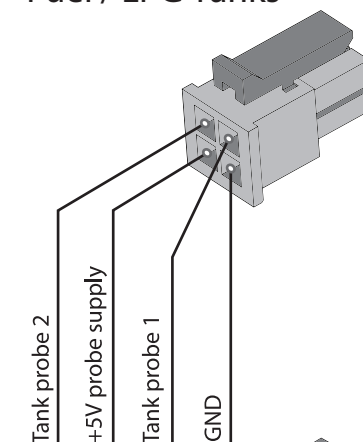

CAN-BUS

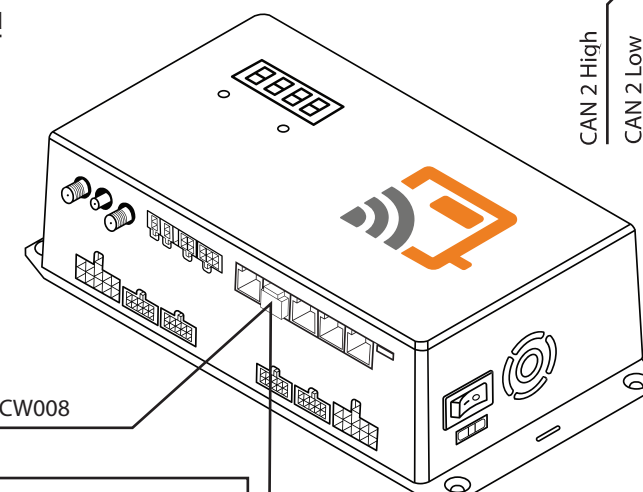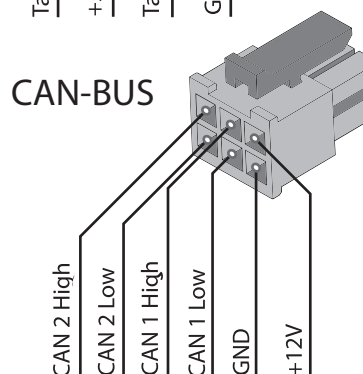

Alde heating connection

